
Wi-Fi Door Window Sensor With Siren


User Manual




* Please read this manual carefully before use and keep it for future reference.

Product introduction

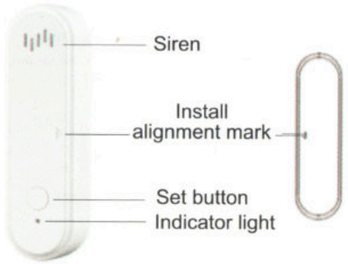

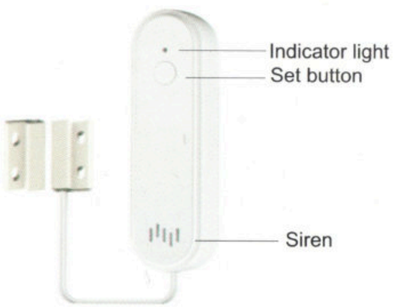

Function Key Introduction

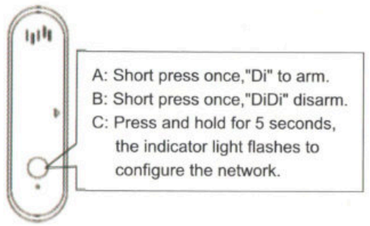

A: Short press once,"Di" to arm.
B: Short press once,"DiDi" disarm.
C: Press and hold for 5 seconds, the indicator light flashes to configure the network.

Main feature

Battery type: Alkaline battery (2* 1.5V AAA battery)
Standby current: ≤180uA
Alarm current: ≤70mA
Sound level: 80dB
Working distance: ≥15mm
Support arm/disarm
With Low Battery remind function
Working temperature: -10°C ~ 55°C
Working humidity: 10% ~ 90%RH
Wi-Fi: IEEE 802.11 b/g/n 2.4GHz


Preparation

Download APP

Smart Life


- Scan the QR code to download.
- Download Smart Life App in App Store or Google Play Store.
- Register an APP account with your email.

Note: Push the back cover upward and take away it, then put in the battery. (Pay attention to the direction of battery insertion).



Network Confguration

❶ Connect your phone to WiFi (2.4G) and turn on Bluetooth.
❷ Open the APP and click "Add Device".

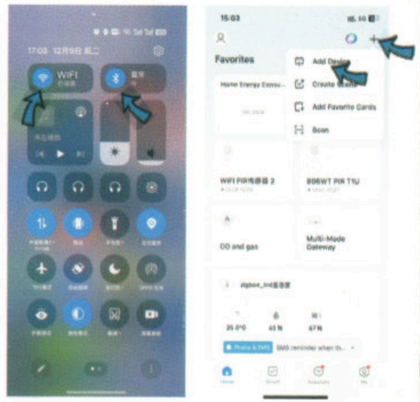


❸ Press and hold the SET button for 5s till the LED indicator light flashing rapidly.




❹ Once APP searched the nearby devices via Bluetooth, tap it.

❺ Enter WiFi information and password

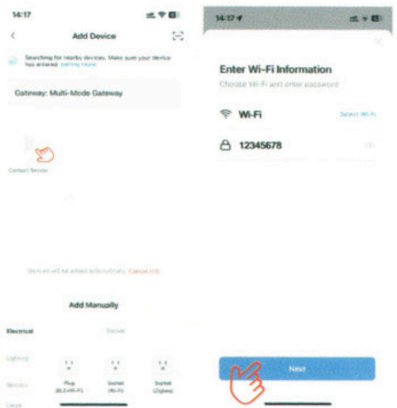

❻ Waiting for successful connection

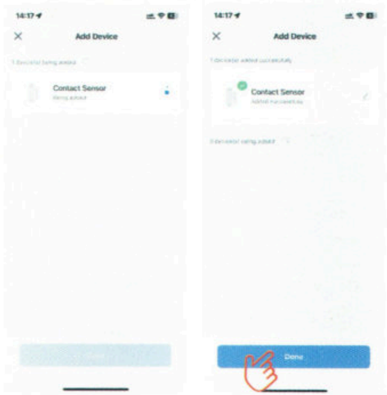


❼ Network connection successfully, And the APP will remind "open" or "closed" when door magnetic is "open" or"closed"

① Arm(Turn on monitoring)

② Disarm(Turn off monitoring)



Setting

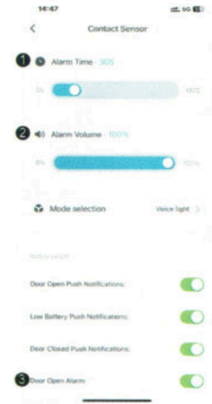


❶Means users can preset alarm time for door sensor, for example, set door alarm for 5s, simply set it to 5 seconds. (5s-180s) can be choosed!

❷Means users can preset alarm volume for door sensor, for example, set door volume for 50%, simply set it to 50%.(0%-100%) can be choosed!"0%" means silent for door sensor when triggered. 100% means 80dB within 1m.

❸In the armed state,when this button is turned on, the app will emit an alarm sound and pop up a push message when the door is opened.

Timing Arming/Disarming

❶ Click create scene
❷ Click schedule (set arming/disarming time)
❸ Click control single device (select door sensor)
❹ Select the arm/disarm function

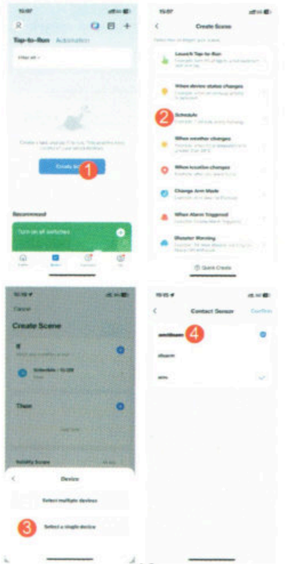

Installation

